


Operation Manual

A. Features

- ★ 12 Digits LCD Display, Display Hour ,Minute ,Second ,Month ,Day and Week
- ★ Daily Alarm and Chime hourly
- ★ 12 / 24H format, Auto Calendar
- ★ 1/100 second Chronograph with split functions
- ★ EL backlight

B. Operational Manual

- ★ In any Mode Press A Key for LED light ON for 3s
- ★ Press B key to convert the mode as following:

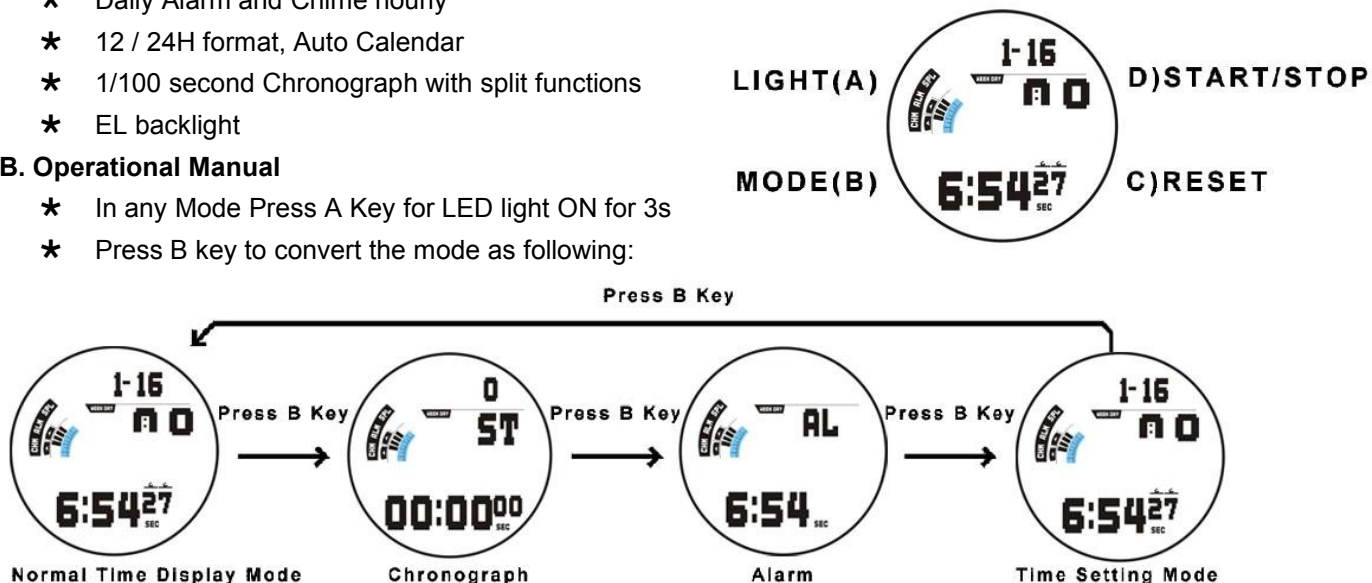

Chronograph function

In normal display mode: press B key once, enter Chronograph mode

- ★ Press D key once to start, press D key again to suspend. When suspend, press C key back to 0:00:00.
- ★ In Chronograph mode, press D key to start, press C key enter into split function. Press C key again to get the record and the stop watch still processing in the back ground. Press D key to suspend. Press C key back to 0:00:00

Alarm Setting

- ★ In normal display Mode, press B key twice to the Alarm mode
- ★ Press C key the Hours will flash, press D key the adjust the Alarm Hours.
- ★ Press C key again the Minutes will flash, press D key to adjust the Alarm Minutes
- ★ Press B key to exit.

Alarm&Chime ON/OFF

In normal display mode press B key twice enter the alarm mode, press D key to ON/OFF the Alarm and Chime function, If only "ALM" icon ON means when the time is alarm time will chime; if only "CHM" icon ON, means every Hour will chime; if the two icon ON means in alarm time and every Hour will chime.

Time & Date Setting

In normal display Mode, press B key three times to enter time setting mode and the icon of seconds will flashing. Press D key to zero.

- ★ Press C key and the icon of Hours will flash. Press D key to reach the correct Hours (Pay attention: A/P/H, "A" means "AM", "P" means "PM", "H" is 24 hour format)
- ★ Press C key and the icon of the Minute will flash. Press D key to reach the correct Minutes.
- ★ Press C key and the icon of the Month will flash. Press D key to reach the current Month
- ★ Press C key and the icon of the Date will flash. Press D key to reach the current date
- ★ Press C key and the icon of the week will flash. Press D key to adjust the day
- ★ Press B key to exit.