



# SKMEI 1834 Operation Manual

## A. Features

- ★ LCD Display, Display Hour, Minute, Second, Month, Day and Week
- ★ Daily Alarm and Chime hourly
- ★ 12 / 24H format select-able, fully automatic calendar
- ★ Time of 31 cities (29 time zones); Summer time
- ★ 60 minutes countdown
- ★ Stopwatch(maximum time 59.99.99)
- ★ Dual time
- ★ 2000-2039 Years,automatic week
- ★ Synchronous movement
- ★ EL backlight

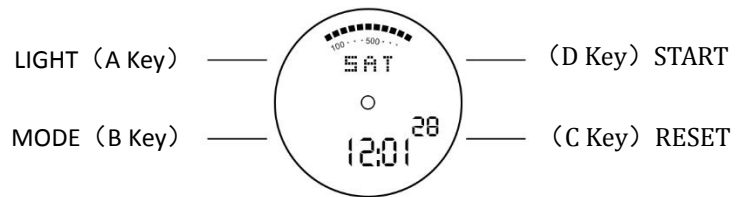

## B. Operational Manual

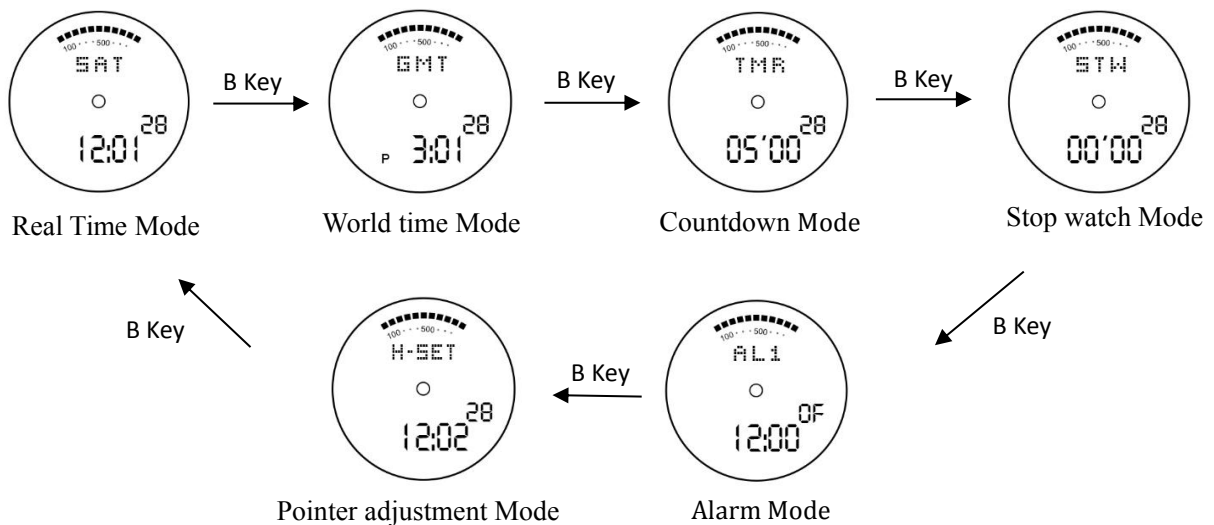

### 1. Real Time Mode

- ★ Press D key to switch: week → date
- ★ Press C key until "seconds" flash to enter the Setting Mode, press B to select the items to be set (flash) as follows:  
 "Seconds" → "Summer time (off/on)" → "time zone" → "time" → "minute" → "12/24h" → "year" → "month" → "day" → "EL time"  
 In the set item, Press D key/A key to adjust, and hold D key/A key to adjust quickly
- ★ While the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes.  
 In the range of 00 to 29, the minutes are unchanged.
- ★ Press C key to return to the real time mode, and the pointer will auto-syn with the time.

### 2. World time Mode

- ★ Press D key to select time zone. Hold D key to select time zone quickly.
- ★ Press C key for 2 seconds to select off/on summer time, and "DST" will be displayed when on, and no "DST" display will be displayed when it is off. (Summer time cannot be set when GMT is displayed)

### 3. Countdown Mode

- ★ Maximum countdown range: 60 minutes, default countdown is 5 minutes.
- ★ Press D key to start / pause the countdown. When countdown is in progress, press D key to pause the countdown, and press C key to return to the original setting value when countdown stops.
- ★ In the countdown mode, Hold C key for 2 seconds to enter the countdown setting mode.  
 Press B to select the setting item.  
 Press D key/A key to adjust, and hold D key/A key to adjust quickly.
- ★ " " Indicates that the initial value will be returned automatically after the countdown
- ★ " " Indicates automatic cycle of countdown.
- ★ "OFF / ON" (off / on) tone
- ★ When the countdown tone is turned on, the countdown is less than 30 seconds with a "drop" sound, and the last 10 seconds with a "drop" sound per second. This function is not available when it is turned off.


- ★ Press C key to exit the countdown setting mode.

#### 4. Stopwatch Mode

- ★ Single record: Press D key to start timing, press D key again to stop the stopwatch, and press C key to clear the stopwatch when it stops.
- ★ Multiple records: Press D key to start timing, then Press C key to control stopwatch and timing. Press D key to stop when the timing continues, and finally Press C key to clear the stopwatch.

#### 5. Alarm Mode

- ★ Press C key to turn on/off the alarm (ALM Display means alarm ON)
- ★ Press D key switches Hourly Chime ("SIG" Display), "AL1-AL4" (four groups of alarm rings), Snooze ("SNZ" display):



- ★ Hold C key for 2 seconds then Hour will flash , enter to alarm setting mode
- ★ press B key to switch "hour-minute" in sequence.  
Press D / A key to adjust the data, hold D / A key to adjust quickly  
Press C key to exit the alarm setting mode.
- ★ In AL1-AL4, the alarm clock can ring for 20 seconds when it reaches alarm time, it can be interrupted by pressing any key halfway.
- ★ When we turn on Snooze Funtion ( "SNZ" display ) , it will ring for 20 seconds, and then it will ring once every 5 minutes (20 seconds) until it rings seven times.if no data then means OF the Snooze function.
- ★ When you turn on Hourly Chime ( "SIG" display ) ,it will ring once the time reaches, if no data then means OF the Hourly chime function.

#### 6. Pointer adjustment Mode

- ★ Hold C key until the full screen flashes.
- ★ press D key to adjust the pointer quickly (to make the needle movement pointer time consistent with the LCD display time).
- ★ In the pointer setting mode, press C key to exit the setting mode.