

# SKMEI 1381 User Manual




## Features :

- ◆ Modes : Hour Display, Alarm, Stopwatch, Countdown, Dual time .
- ◆ Normal display with Week, Year, month, Day, Hour, Minute, Seconds ,12 / 24H .  
(Calendar from 2000 to 2049)
- ◆ 5 Alarm, Chime hourly
- ◆ Stopwatch, 1/100 second Chronograph with split functions
- ◆ Countdown
- ◆ Dual Time

## Operational Manual:

- ❶ Press B Key to select function mode
- ❶ At any mode , Press A Key , EL backlight for 3s .

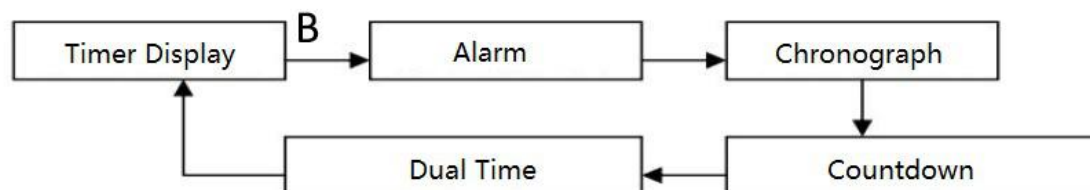

## Time & Date Setting :

- ❶ Press and hold C key for 3 seconds, seconds flashing then enter into time setting
- ❶ Press B/D/F Key to select Second/Minute/ Hour /Day /Month / Year
- ❶ Press E key to adjust the flashing items.
- ❶ Press C key to exit time setting mode.


## 12/ 24 Hour :

- ❶ In normal time mode , press D/F key to change 12/24 H

## Alarm Mode:

- ❶ In normal time mode , Press B key one time enter into alarm mode

- ① Press E key to select an alarm .

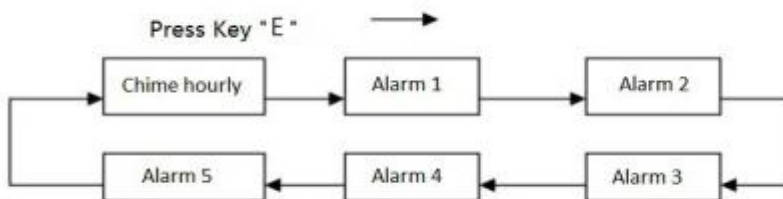

- ① After selecting an Alarm ,press and hold C key until Hours flashing , press E key to adjust Hour ,
- ① press B/D/F key to select the minute , Press E key to adjust minute
- ① Press C key to exit alarm setting mode

## Chronograph Mode:



- ① In normal time mode ,Press B key twice enter into chronograph , press D/F key to star/stop , press C key get back to 0:00:00
- ① When running ,press C key to split Counting. Then press D/F key to exit split count ,and stop counting ;
- ① When exit split count ,press C key to zero.

## Countdown Mode:



- ① In normal time mode , press B key 3 times enter into Countdown , press and hold C key until Hours flashing ,press E key to adjust hour . Press B/D/F key to select Minute, press E key to adjust minute.
- ① Press C key to confirm
- ① Press D/F key to start/pause
- ① When done with the countdown, watch will make a notice voice for 10 seconds .
- ① Press C key back to countdown mode .

## Dual Time Mode:

- ① In normal time mode, press B key for 4 times enter into Dual Time mode
- ① Press and hold C key until Hour flashing , press E key to adjust Hour .
- ① Press B /D /F key to select Minute , press E key to adjust minute.
- ① Press C key to exit dual time setting mode

