



#1364 Instruction

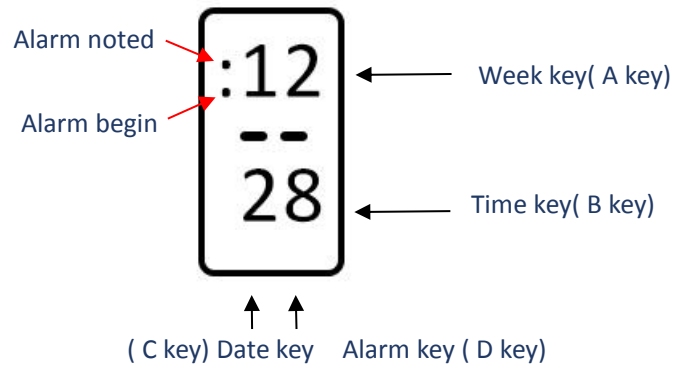


- ③ 4 mode: time mode、date mode、week mode、alarm mode
- ③ 12h/24h display, month ,day ,week, alarm hour minute display ,key tone


Part description

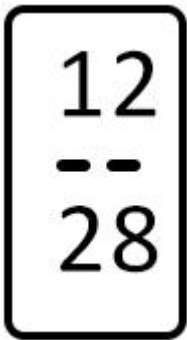


Present time: 12: 28

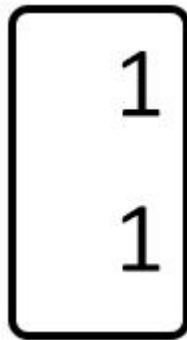

Present date: 1st.January

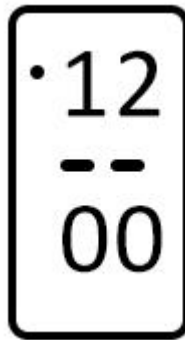

Alarm on

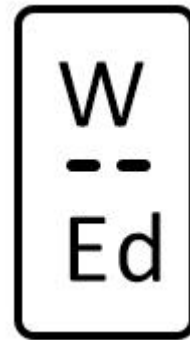

Present Wednesday

Press corresponding key to choose different functions

Timing function can be setup and check hour/minute/second

Time/Date and Alarm Setting

1. Press B key to setup when the Timing function is on.
2. Press and hold B key for three seconds, it starts to setup when 'Second' flashing.
3. Press A key , " Second " turning to zero;
4. Press A key to set " Hour ", press A key to adjust, then press and hold A key, " Hour " will increase fast.
5. Press B key, when 'Minute' flashing, press A key to adjust
6. Press B key, when 'Year' flashing ,press A key to adjust
7. Press B key, when 'Month' flashing, press A key to adjust
8. Press the B key, when 'Day' flashing, press A to adjust
9. Press the B key, when '24h' flashing, press A key to choose 12h/24h mode
10. Press B key to exit the setting.
11. Press and hold D key for 3s to enter into alarm function and when its flashing, press A key to turn off/on, the alarm symbol light will light up when alarm is on.
12. Press D key, 'Hour' flashing, press A key to adjust.
13. Press D key, 'Minute' flashing, press A key to adjust.
14. Press D key to exit the setting, it will return to standby mode after 5s without any operation