



Solar MOVEMENT INSTRUCTION

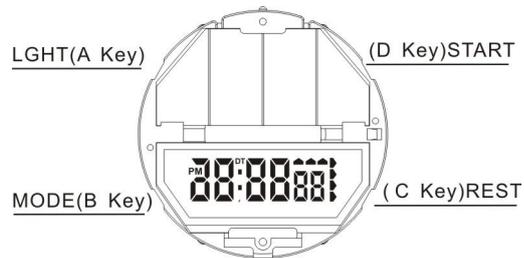

A. Features

- ◆ 6 Digits LCD Display, Display Hour, Minute, Second, Month, Day and week
- ◆ Daily Alarm and Chime hourly
- ◆ Snooze
- ◆ 12/24H format selectable, Auto Calendar
- ◆ 1/100 second Chronograph with split functions
- ◆ EL backlight
- ◆ Without sun or light, the watch power come from the battery.
- ◆ In the sun or light source, the solar panel can accept solar/light power, and supply it to the watch for work, no need battery power.

B. Operational Manual

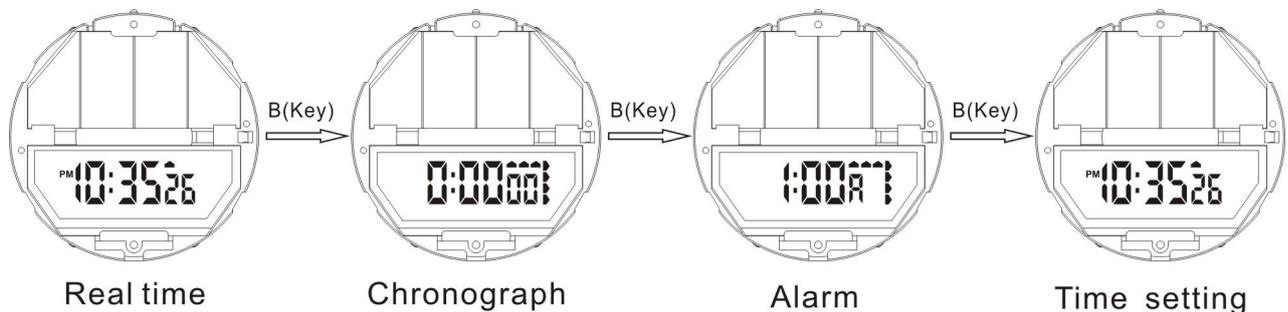

1. At any state, press A key EL backlight for 3s.

2. Real Time

- ◆ Press C key to display Alarm, Press D key to display Date.
- ◆ Turn On/Off Alarm Chime
 - a) Press C+D key to turn On/Off Alarm, indicator “” displaying for On.
 - b) Press C+B key to turn On/Off Chime, all days of week displaying for On

3. Chronograph

- ◆ The display range of the Chronograph is 23 hours, 59 minutes, 59.99 seconds.
- ◆ Press D key to Start/Stop running
- ◆ When stop, press C key to zero.
- ◆ When running, press C key to split count
- ◆ Then press D key to exit split count, and stop counting.
- ◆ When exit split count, press C key to display all counts, and press C key again to zero
- ◆ When running, press B key to return to Real Time Mode, and it running at back.

4. Daily Alarm

- ◆ “Hour” flashing once entry Daily Alarm.
- ◆ Press C key to select “Hour” or “Minute” setting.
- ◆ Press D key to adjust the flashing item
- ◆ Press C key to confirm
- ◆ Press B key to return to Real Time mode.
- ◆ Alarm Snooze ON/OFF

At Alarm sounding state, press C key to stop sounding, and press D key to ON/OFF snooze function. When Snooze function be ON, it will sound five minutes later, and auto stop after sounding for a minute.

5. Time Setting

- ◆ “second” flashing when loading, press D key to zero, Press C key to select item as following sequence: Minute-----Hour-----Day-----Month-----Week
- ◆ Press D key to adjust the flashing item.
- ◆ When setting “Hour” ,“H” display for 24H format, “A” or “P” for 12H format.
- ◆ Press D key while the seconds are in the range of 00 to 59 resets them to 00 and the minutes are unchanged.

Take off the battery, put the watch in the sun or light source for 2 minutes, the movement will display the data. Without sun or light source, the battery supply the power to the watch to work.