



时刻美 1733 中文说明书

LIGHT (A 键) ——

(D 键) ST/STP

MODE (B 键) ——


(C 键) RESET



A. 功能简介：

- ◆ 15位计时功能，时、分、秒、月、日、年、星期
- ◆ 响闹、贪睡及整点报时
- ◆ 12/24时制选择，全自动日历
- ◆ 1/100秒秒表及分段计时，秒表的最大值为23 小时 59 分 59 秒
- ◆ 两地时间
- ◆ 倒计时(最大倒计时时间为23小时、59分、59秒)
- ◆ EL背光

B. 产品功能模式：

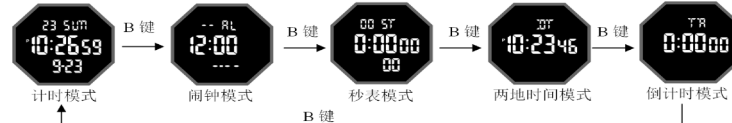

- ◆ 1.任何模式下，按A键EL点亮3秒。

2. 计时模式：

- ◆ 在计时模式下，按C键两秒进入时间设置状态。
 - a).此时“秒”闪烁，按D键“秒”归零，按B键依次选择以下项目：
秒 → 时 → 分 → 年 → 月 → 日
 - b).按D键调整选中的项目。
 - c).按C键确认并返回时间显示状态。
 - d).在设置“秒”时，若秒数值于30至59之间，在秒数值回到00的同时，分数值亦会加1；若秒数值是于00至29之间，分数值则保持不变。
 - e).在计时模式下，按D键切换12/24时制。
 - f).按C键退出设置状态，返回时间模式。

3. 闹铃模式：

- ◆ 在闹铃模式下按C键依次关闭或开启闹铃和贪睡功能 (⏰/SNZ)。
- ◆ 在闹铃模式下，按一下D键进入整点报时画面，在此画面按C键，开启/关闭 (⏰) 整点报时。
- ◆ 在开启闹铃的情况下，到达闹铃设定时间时，(⏰) 会闪烁，闹声会响闹10秒后自动停止。
- ◆ **闹铃设定**
- ◆ 在闹铃模式下，按住C键直到闹铃小时闪烁，进入闹铃设置。
- ◆ 按B键选择闹铃时-分-月-日，按D键调整数据。
- ◆ 当设置闹铃月份和日期时，如果设置了月份和日期的数据，则该月份和日期将闹铃，如果没有数据则表示关闭月份和日期的闹铃功能
- ◆ 如果启用了闹铃功能，则在每种模式下都会显示闹铃符号
- ◆ 按C键退出。
- ◆ 备注：设置闹铃的月，日，小时和分钟，使其在设置的日期和时间响起。“--”表示全部，例如，如果将月份设置为“--”，每月都会发出闹铃。

4. 秒表模式：


- ◆ 在秒表模式下，按一次D键开始执行跑秒，再按一次D键跑秒停止，在跑秒停止时按C键是跑秒归零。
- ◆ 在秒表模式下，按D键开始计时，按C键进入分段计时状态，有(“SPL”符号)开始中途测量。之后按C键开始计时，即记录第一位选手完成时间，再按D键中途测量完毕，记录第二位选手的完成时间，最后按C键清除记录。

5. 两地时间模式：

- ◆ 在两地时间模式下，按C键2秒“时”闪烁。按D键调整，按B键依次选择以下项目：
时 ↔ 分
- ◆ 按D键调整选中的项目。
- ◆ 按C键确认并返回两地时间显示模式。

6. 倒计时模式：

- ◆ 按D键开始/停止倒计时；
- ◆ 当倒计时停止时，按C键倒数时间会自动返回最初设定的开始时间。
- ◆ 当倒计时至零时，倒计时自动停止，响闹讯号将持续约15秒，按任意键停止响闹声后，倒计时最大的倒计时时间是23小时59分59秒；
- ◆ 当倒计时停止时，按D键重新开始倒计时；
- ◆ 按C键2秒进入倒计时时间设置：
 - a).按B键选择调整项目，顺序如下：
时 ↔ 分
 - b).按D键调整选中的项目
 - c).按C键确认并返回倒计时显示状态

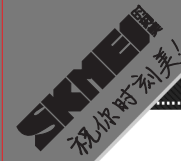

SKMEI 1733 Operation Manual

LIGHT (A Key) ——

(D Key) ST/STP

MODE (B Key) ——

(C Key) RESET



A. Features：

- ◆ 15 Digits LCD Display, Display Hour, Minute, Second, Month, Day, Year and Week
- ◆ Daily Alarm and Chime hourly ◆ Snooze function ◆ 12 / 24H format selectable, Auto Calendar
- ◆ 1/100 second Chronograph with split functions ◆ Timer ◆ Dual Time ◆ EL backlight

B. Operational Manual：



- ◆ At any state, press A or E key EL backlight for 3s.

Normal Time Mode：

- ◆ Time Setting
 - a). Press and hold C key for 2s to time setting state and “Second” flashing, press D key to zero; Press B key to select item as following sequence:
Second → Hour → Minute → Year → Month → Day
 - b). Press D key to adjust the flashing item;
 - c). Press C key to return to Normal Time Mode;
 - d). Press D key while the seconds are in the range of 30 to 59 resets them to 00 and adds 1 to the minutes. In the range of 00 to 29, the minutes are unchanged;
 - e). 12/24-Hour format: In the timekeeping Mode, Press D key to toggle between 12-hour (12H) and 24-hour (24H) timekeeping;
 - f). Press C key to withdraw to setting state, return to normal time mode.

Daily Alarm Mode：

- ◆ In alarm mode, press C key to turn on/off the alarm and snooze function (⏰/SNZ) in turn;
- ◆ In alarm mode, press D key once to enter the hourly timekeeping screen, press C key on this screen to turn on/off (⏰) the hourly timekeeping;
- ◆ When the alarm is turned on, (⏰) will flash when the alarm set time is reached, and the alarm will sound for 10 seconds and then stop automatically.

Alarm setting Mode：

- ◆ In Alarm Mode, Hold C key till the alarm Hours flashing enter into Alarm setting;
- ◆ Press B key to choose Alarm Hour -- Minute -- Month -- Date, Press D Key to adjust the data;
- ◆ When you setting the Alarm Month and Date, if you set the data of Month& Date, then on that Month& Date will alarm, if no data then means OFF the Month& Date alarm function;
- ◆ If you ON the Alarm function, the alarm symbol will show in each Mode; Press C to exit.
- ◆ Remarks: Set the month, day, hour, and minute of the alarm clock to make the alarm sound. when it reaches the set date and time; “--” means all. for example, if the month is set to “--” the alarm will sound every month.

Chronograph Mode：

- ◆ Press D key to Start/Stop running ;
- ◆ When stop, press C key to zero;
- ◆ When running, press C key to split Counting. Then press D key to exit split count, and stop counting ; When exit split count, press C key to zero;
- ◆ When running, press B key to return to Normal Time mode, and it running at back.

Dual Time Mode：

- ◆ Dual Time setting
- ◆ In Dual Time mode, Press and hold C key for 2s to select the “Hour” setting, Press D key to adjust the flashing item, Press B key choose the next item:
Hour ↔ Minute
- ◆ Press D key to adjust the flashing item;
- ◆ Press C key again to finish setting, and return to Dual Time displaying mode.

Countdown Mode：

- ◆ Press D key to turn on / off Countdown;
- ◆ When the countdown it stopped, Press C key to countdown the time and it will automatically return to the initial set start time;
- ◆ The countdown will stop automatically When the countdown reaches zero, and the alarm signal will continue for about 15 seconds. After pressing any key to stop the alarm, the maximum countdown time is 23 hours 59 minutes 59 seconds;
- ◆ When the countdown stops, press D key to restart the countdown;
- ◆ Press and hold C key for 2s to time setting state;
 - a). Press B key to select adjustment items, the order is as follows :
Hour ↔ Minutes
 - b). Press D key to adjust the selected item;
 - c). Press C key to confirm and return to countdown display mode.