


时刻美 1123 手表操作使用说明书

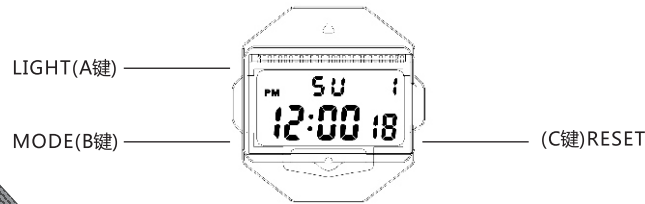


功能简介:

- ◆ 10位计时功能, 显示时、分、秒、日、月、星期
- ◆ 12/24时制选择, 全自动日历
- ◆ EL背光
- ◆ 闹铃及整点报时
- ◆ 1/100秒秒表

产品功能模式:

- ◆ 在计时模式下依次按B键切换各个模式:

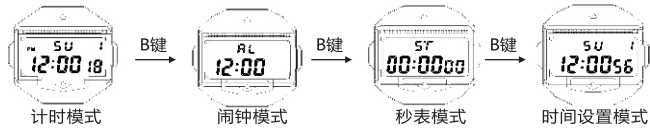

- ◆ 任意模式下按A键亮背光, 按住A键不放可常亮。

计时功能:

- ◆ 在计时功能下, 按C键转换12/24时制, 屏幕上显示“24H”时为24时制模式。不显示表示12小时制, 12小时制下PM代表下午时间。

闹钟功能:

- ◆ 闹钟及整点报时关闭与开启: 在闹钟模式下 (“时”或“分”不闪动), 按C键是依次开启/关闭闹钟: (“ ”) 及整点报时: (“ ”)。
- ◆ 闹钟开启和整点报时开启 (“ ”) 会在所有功能模式中显示。
- ◆ 无论目前所显示的是什么功能模式, 闹钟在到达预设的时间时会发出20秒的鸣响, 在闹钟响闹时, 闹钟符号 (“ ”) 会闪动。
- ◆ 开启整点报时功能后, 会在每小时整点时发出两声鸣声。
- ◆ 闹钟时间设定: 在闹钟模式下, 按A键 “时” 闪动, 按C键进行调整, 再按A键 “分” 闪动, 按C键进行调整, 再按B键设置完毕。

秒表及分段计时功能:


- ◆ 秒表显示的最大时间为59分59.59秒。
- ◆ 若不停止秒表, 即使退出秒表功能模式, 测时也会持续进行。
- ◆ 在中途时间在画面中显示时, 若退出秒表功能模式, 中途时间便会被清除及画面会返回经过时间的测量画面。
- ◆ 在秒表模式下, 按一次C键开始执行跑秒, 再按一次C键跑秒停止, 在跑秒停止时按A键是跑秒归零。
- ◆ 在秒表模式下, 按C键开始计时, 按A键进入分段计时状态, 开始中途测量。之后按A键开始计时, 即记录第一位选手完成时间, 再按C键中途测量完毕, 记录第二位选手的完成时间, 最后按A键清除记录。

时间设置功能:

- ◆ 在时钟设置模式下, “秒” 闪动, 按C键调整 “秒” 归零; 按A键 “时” 闪动, 再按A键依次
- ◆ 进入 “分”、“月”、“日”、“星期” 的调整, 在对应元素闪动时, 按C键进行调整。
- ◆ 按B键保存返回时钟模式。星期的英文表示: MO 星期一; TU 星期二; WE 星期三; TH 星期四; FR 星期五; SA 星期六; SU 星期日。

注意事项: 在游泳或洗车时, 可以使用本表, 但不能在水中操作按钮。


SKMEI Model # 1123 User Manual

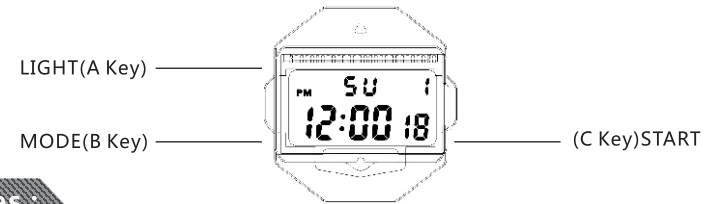

A. Features:

- ◆ 12 Digits LCD Display, Display Hour, Minute, Second, Month, Day and Week
- ◆ Daily Alarm and Chime hourly
- ◆ 12 / 24H format selectable, Auto Calendar
- ◆ 1/100 second Chronograph with split time.
- ◆ EL backlight: At any mode, press A key the LED backlight will last for 3 seconds.

B. Operational Manual:

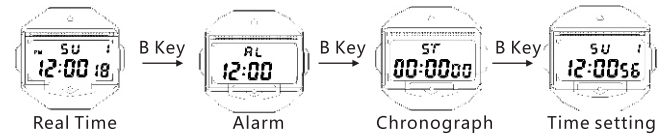

- ◆ Press B key to switch to different mode.

Real Time:

- ◆ In Real Time Mode, press C key to switch to 12H or 24H display format.

Daily Alarm:

- ◆ Under Alarm mode, Press C key to turn on/off Alarm (“ ”) or Chime (“ ”)。
- ◆ When the alarm icon “ ” appears, the alarm is on. When the alarm icon disappears, the alarm is off.
- ◆ When the hourly chime icon “ ” appears, the chime is on. When the hourly icon disappears, the chime is off. Both appear means both on. Both disappear means both off.
- ◆ The alarm sound will last for 20 seconds. Press any button to stop the alarm sound.
- ◆ Alarm setting: Under Alarm mode, press A key for alarm setting, the “Hour” is flashing, press C key to adjust the hour; Then press A key, the “Minute” is flashing, press C key to adjust the minute.

Chronograph:

- ◆ The display range of the Chronograph is 23 hours, 59 minutes, 59.99 seconds
- ◆ Press C key to Start/Stop running;
- ◆ When stop, press A key to reset the date to zero.
- ◆ When running, press A key to split count.
- ◆ Then press C key to exit split count and stop counting; press A key to display all counts, press A key again to reset the count to zero.
- ◆ When the count is running, press B key to back to Real Time Mode, the count is still running.

Time Setting:

- ◆ Press B key to switch to different mode.
- ◆ Under Time setting mode, the “Second” is flashing, press A key to select as following sequence: Second→Hour→Minute→Month→Date→Week.
- ◆ Press C key to adjust the flashing item.