




时刻美6个字电子手表通用说明书

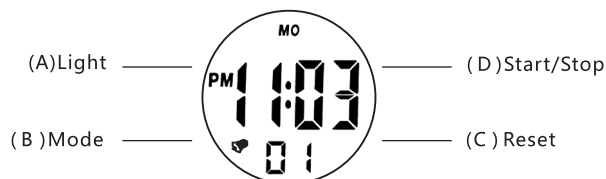

功能简介：


- ◆ 正常显示模式：显示星期、小时、分钟和秒钟。
- ◆ 按D查看日期。
- ◆ 按B进行模式转换。
- ◆ 按A进入夜光模式。

手表模式转换：

- ◆ 从正常显示模式切换到其它显示模式请按B键。
在正常显示模式按B → 跑秒模式 → 响闹模式 → 时间设置模式

跑秒模式：

- ◆ 在正常显示模式下按B键一次，进入跑秒模式，按D键开始，按D键暂停，按D键继续计时，按D键暂停或者结束计时。按C键将计时数据归零。
- ◆ 在正常显示模式下按B键一次，进入跑秒模式，按D开始，按C键进入分段计时模式。此时可以读出第一组数据，另外第二组数据仍隐藏在后台跑秒。按D键停止第二组数据的计时，按C键读数，得出第二组计时数据。再按C键可将数据归零。



响闹时间设置：

- ◆ 在正常显示模式下按 B 两次进入响闹时间设置模式。
- ◆ 直接进入响闹小时设置，此时小时将会闪动。
- ◆ 按 D 改变响闹小时。
- ◆ 再次按 C 进入响闹分钟设置且分钟将会闪动。
- ◆ 按 D 改变响闹分钟。
- ◆ 按 B 退出响闹时间设置模式返回正常显示模式。

时间与日历设置：

- ◆ 在正常显示模式下按 B 三次进入时间与日历设置模式并且秒钟将闪动。
- ◆ 按 C 进入分钟设置且分钟将会闪动。
- ◆ 按 D 改变分钟。
- ◆ 再次按 C 进入小时设置且小时将会闪动。
- ◆ 按 D 改变小时。(注意：A/P 分别代表12小时制上午/下午，H 代表 24小时制)
- ◆ 按 C 第三次将进入日期设置且日期将会闪动。
- ◆ 按 D 改变日期。
- ◆ 按 C 第四次将进入月份设置且月份将会闪动。
- ◆ 按 D 改变月份。
- ◆ 按 C 第五次将进入星期设置且星期将会闪动。
- ◆ 按 D 改变星期。
- ◆ 按 B 退出时间与日历设置模式并且返回正常显示模式。

响闹开关设置：

- ◆ 在正常模式下同时按D和C响闹图标 出现，则表示响闹为开;如果响闹图标不显，则表示响闹为关。

整点报时开关设置：

- ◆ 在正常模式下，长按住C键后短按B键选择,假如星期全显则表示整点报时开启，如果星期不显，则表示整点报时关闭。

注意事项：在游泳或洗车时，可以使用本表，但不能在水中操作按钮。



SKMEI 6 Digits Digital Watch Instruction



A. Features :


- ◆ 6 Digits LCD Display , Display Hour ,Minute ,Second ,Week
- ◆ Chime hourly and Daily Alarm
- ◆ 12 / 24H format selectable , Auto Calendar
- ◆ 1/100 second Chronograph with split function
- ◆ EL backlight

B. Operational Manual :

- ◆ At any mode, press A key then EL backlight will last for 3s.
- ◆ In normal Mode, Press D key to check Month and Date
- ◆ In normal Mode, Press C key to check Alarm time
- ◆ Press B key to convert mode:
In normal display modes: Press B → Chronograph Mode → Alarm Setting Mode → Time Setting Mode

Chronograph function :

- ◆ In normal display mode: press B key , enter Chronograph mode
- ◆ Press D to start, press D again to suspend, press D again to continue,press D to suspend again,.....when suspend,press C key back to 0:00:00.
- ◆ In Chronograph mode, press D key to start, press C key enter into split function and get the first group record ,but the second group is still processing in the back ground, press C key again to run the third group record, press C again to stop the running of the second group and read the second record; but the third group is still processing in the back ground.....when the final group finished, Press D key to stop the SPL function, press C key to read the final group(SUM) record, press C key again to clear the record to 0:00:00.



Alarm Setting :

- ◆ in normal display Mode, press B key twice enter into Alarm Mode, and Alarm Hour is flashing,Press D key to adjust the correct hour for your Alarm.
- ◆ Press C key and the Alarm Minutes is flashing. Press D key to adjust the correct minute for your alarm.
- ◆ Press B key to exit.

Alarm & Chime ON/OFF :

- ◆ In normal display mode press C and D key together to ON/OFF the alarm. If the icon appears in the corner, the alarm is on. If the icon disappears, the alarm is off. Press B key to exit.
- ◆ In normal display mode, hold C key then press B key to ON/OFF the hourly chime.If all the week icons (MO/TU/WE/TH/FR/SA/SU) appear, the Chime is on; if all the week icons disappear, the Chime is off.

Time Setting :

- ◆ In normal display Mode, press B key three times to enter time setting mode and the Seconds will be flashing. Press D key to reset the Seconds to zero.
- ◆ Press C key the Minute will flash. Press D key to adjust the correct Minutes.
- ◆ Press C key the Hours will flash. Press D key to adjust correct Hours
- ◆ Pay Attention: A/P means 12H format AM/PM,H means 24H format
- ◆ Press C key the Date will flash. Press D key to adjust correct date
- ◆ Press C key the Month will flash. Press D key to adjust correct Month
- ◆ Press C key the week will flash. Press D key to adjust the correct week.
- ◆ Press B key to exit.

Attention:You can wear the watch when swimming or washing car.But not allow to operate it